



# QUICK GUIDE

## MOTION DETECTION ALL IN ONE

On the Main Screen of your DVR, press right click and enter to the Main Menu

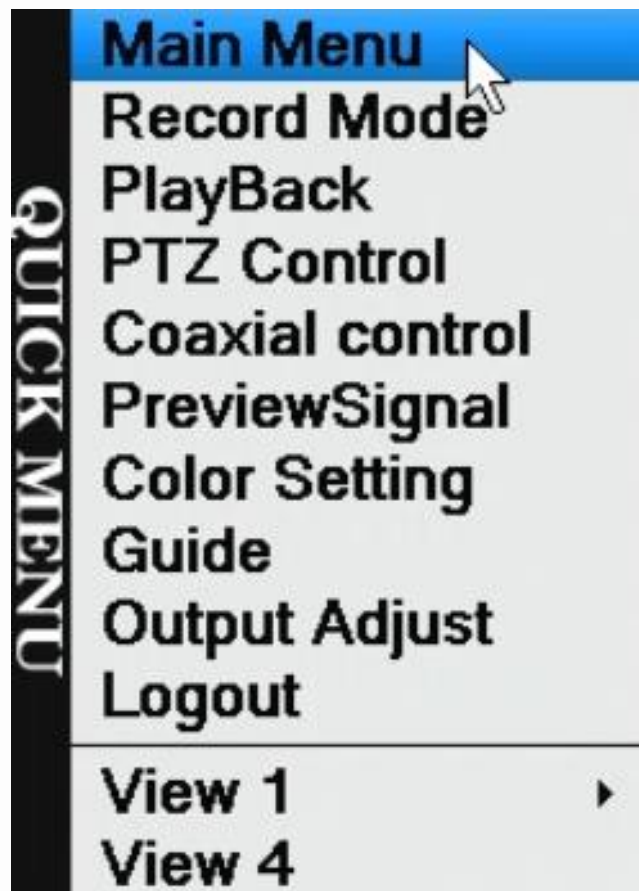

You should go to the Alarm Set Up and select the Alarm Set section.

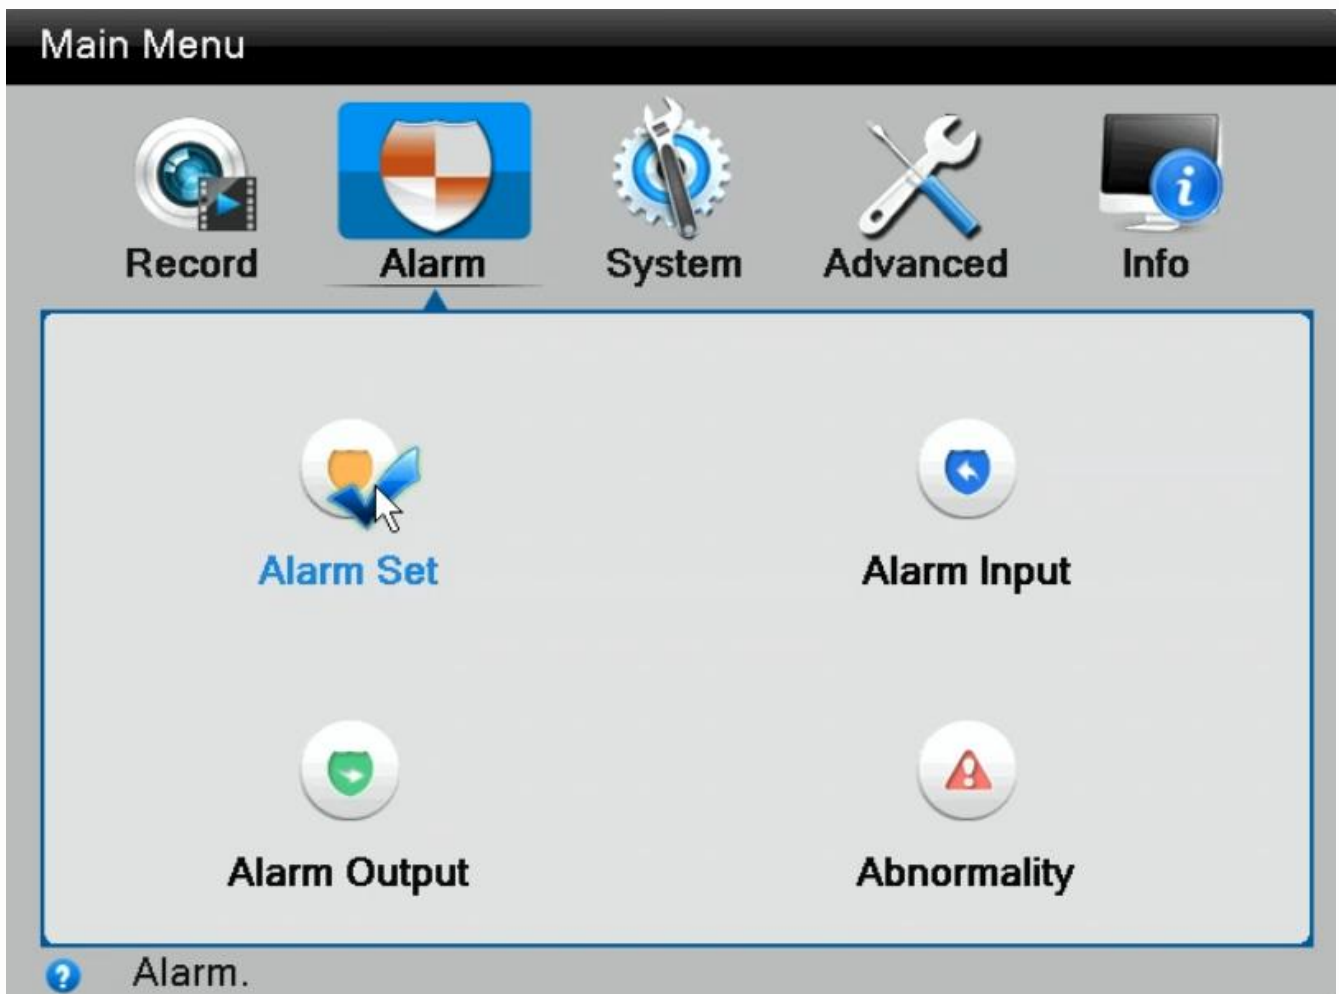


Check the "Enable" box for the channel you want to activate this function.

**Main Menu->Alarm Set**

Channel	<input type="text" value="1"/>		
Alarm Type	<input type="text" value="Motion Dete"/>	Enable	<input type="checkbox"/>
Sensitivity	<input type="text" value="Middle"/>	Region	<input type="button" value="Set"/>
<hr/>			
Period	<input type="button" value="Set"/>	Interval	<input type="text" value="1"/> Sec.
Alarm Output	<input type="text" value="1"/>	Delay	<input type="text" value="10"/> Sec.
Record Channel	<input type="text" value="1"/> <input type="text" value="2"/> <input type="text" value="3"/> <input type="text" value="4"/>		
Tour	<input type="text" value="1"/> <input type="text" value="2"/> <input type="text" value="3"/> <input type="text" value="4"/>		
PTZ Activation	<input type="button" value="Set"/>	Record delay	<input type="text" value="10"/> Sec.
Show Message	<input type="checkbox"/>	Send Email	<input type="checkbox"/>
Buzzer	<input type="checkbox"/>	FTP upload	<input type="checkbox"/>

To select the sensitivity level, you must consider that the higher the more sensitive the device will be to detect any movement. Then in "Set" select the area to be detected by dragging the mouse with the left button.

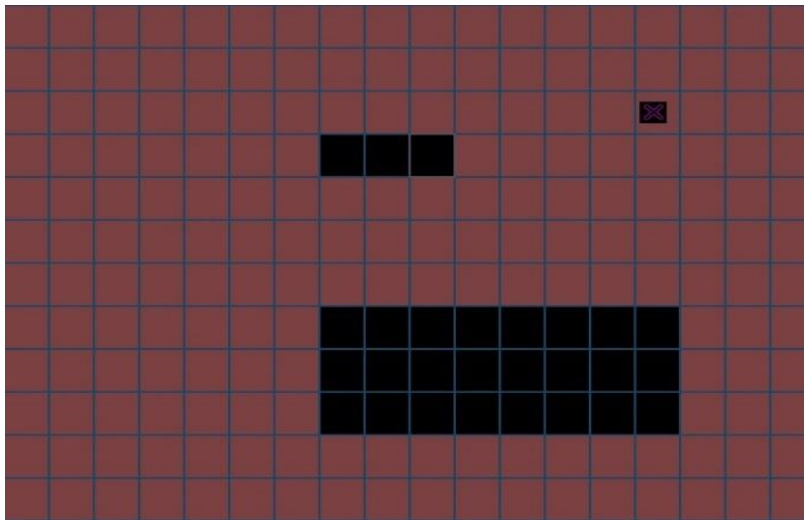




You must also enable the Send Mail option in the motion detection alarm options, press OK.

Main Menu->Alarm Set

Channel	<input type="text" value="1"/>		
Alarm Type	<input type="text" value="Motion Dete"/>	Enable	<input checked="" type="checkbox"/>
Sensitivity	<input type="text" value="Middle"/>	Region	<input type="text" value="Set"/>
Period	<input type="text" value="Set"/>	Interval	<input type="text" value="1"/> Sec.
Alarm Output	<input type="text" value="1"/>	Delay	<input type="text" value="10"/> Sec.
Record Channel	<input type="text" value="1"/> <input type="text" value="2"/> <input type="text" value="3"/> <input type="text" value="4"/>		
Tour	<input type="text" value="1"/> <input type="text" value="2"/> <input type="text" value="3"/> <input type="text" value="4"/>		
PTZ Activation	<input type="text" value="Set"/>	Record delay	<input type="text" value="10"/> Sec.
Show Message	<input type="checkbox"/>	Send Email	<input type="checkbox"/>
Buzzer	<input type="checkbox"/>	FTP upload	<input type="checkbox"/>



After completing these steps, you should go to the network set up and enter on Net Server where you must double-click the E-Mail option.

The image shows two overlapping windows from a network configuration application. The top window is titled 'Main Menu->Network' and contains various network settings. The bottom window is titled 'Main Menu->Network->Net Service' and displays a list of services with 'EMAIL' selected.

**Main Menu->Network**

Net Card: Wire Netcard  DHCP Enable  
IP Address: 192 . 168 . 1 . 18   
Subnet Mask: 255 . 255 . 255 . 0  
Gateway: 192 . 168 . 1 . 1  
Primary DNS: 8 . 8 . 8 . 8  
Secondary DNS: 8 . 8 . 4 . 4  
TCP Port: 34567 MTU: 1500  
HTTP Port: 80  
HS Download:   
Transfer Policy: Quality Pref

**Main Menu->Network->Net Service**

Net Server	Net Server Info
PPPoE	0:
NTP	0: time.windows.com:10
EMAIL	0: smtp.gmail.com:465
IP FILTER	0: Blacklist:0 Whitelist:0
DDNS	DDNS Set Invalid
FTP	0: FTP
ARSP	
Wireless Config	Not enabled
UPNP	0
Wifi	Not enabled
RTSP	1: 554
Cloud	Enable: av83b67574



You must enter the fields as follows:

Enable: checked

SMTP Server: for Gmail (smtp.gmail.com), for Hotmail (smtp.live.com)

Port: for Gmail (465), for Hotmail (25)


Need SSL: check

User Name: Sender mail, no special characters

Password: mail password

Sender: Email sending alerts

Receiver: Email receiving alerts

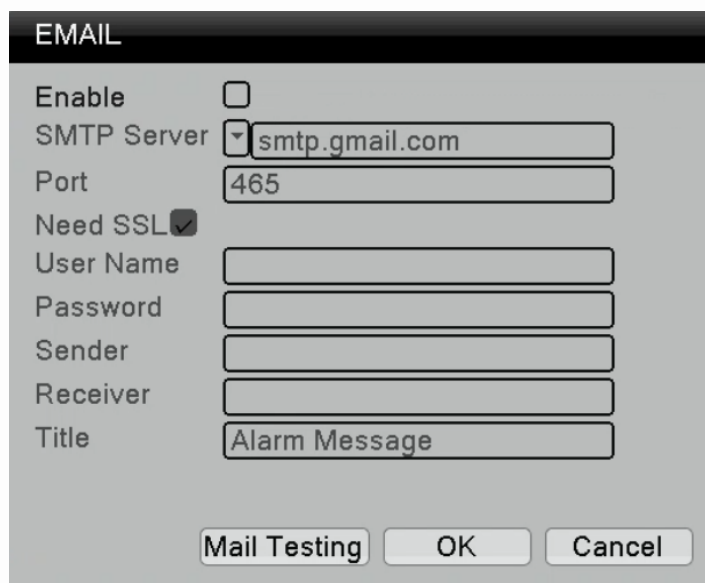




The screenshot shows a dialog box titled "EMAIL" with the following fields and controls:

- Enable:
- SMTP Server:
- Port:
- Need SSL:
- User Name:
- Password:
- Sender:
- Receiver:
- Title:

At the bottom of the dialog box, there are three buttons: "Mail Testing", "OK", and "Cancel".

Press OK

As an additional recommendation, we suggest that if you are going to use your Gmail account you must activate the application access, as indicated by the images below:

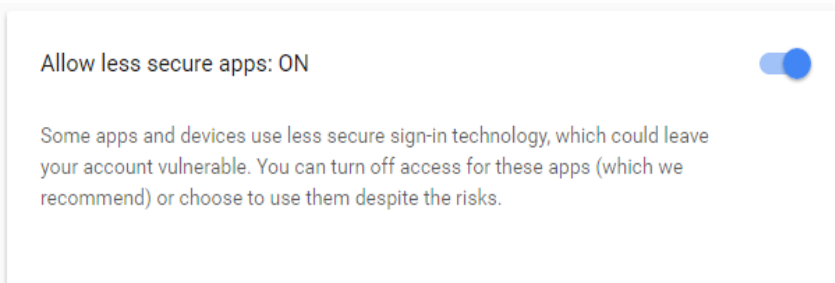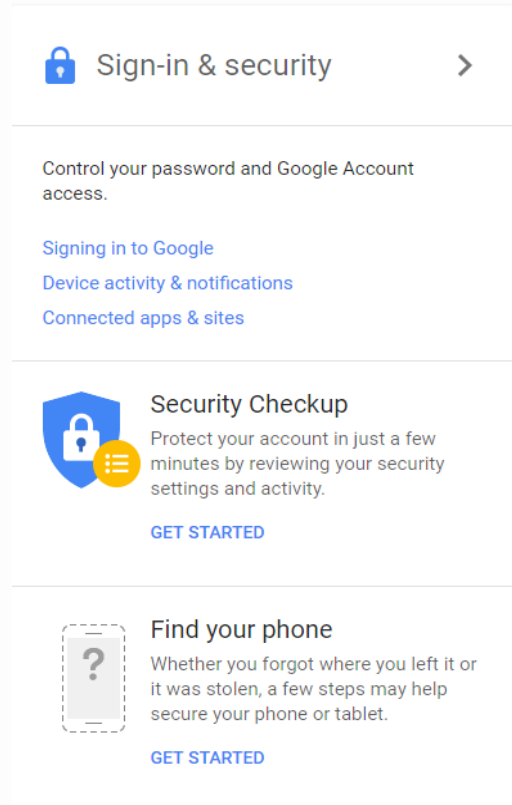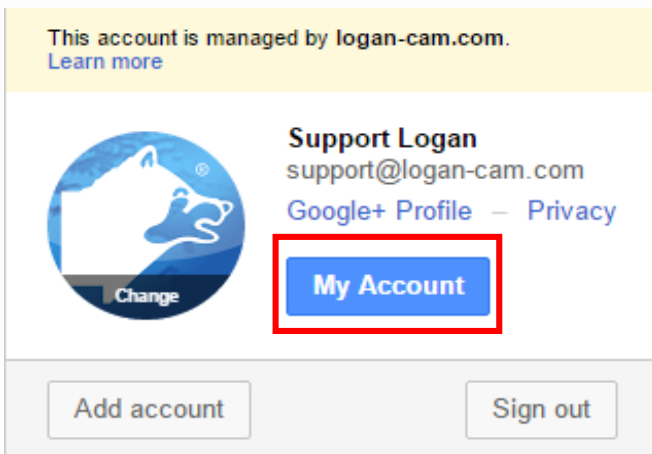

Any other questions you can contact our  
Technical Support Department at [support@logan-cam.com](mailto:support@logan-cam.com)



<http://www.logan-cam.com/>